



HELP PHONE WITH 911 EMERGENCY KEY MODEL FC-4357 OWNER'S MANUAL AND OPERATING INSTRUCTIONS

FEATURES

1. 2 ONE-TOUCH DIALING MEMORIES
2. '911' EMERGENCY ONE-TOUCH KEY
3. 10 TWO-TOUCH DIALING MEMORIES
4. HOLD FUNCTION
5. FLASH FUNCTION
6. REDIAL FUNCTION
7. SPEAKERPHONE FUNCTION
8. RECEIVER VOLUME CONTROL (HI/MI/LO)
9. RINGER VOLUME CONTROL (HI/LO/OFF)
10. SPEAKERPHONE VOLUME CONTROL (MAX to MIN)
11. INCOMING CALL NEON INDICATOR / MESSAGE LIGHT FOR PBX
12. IN USE LED INDICATOR

CAUTION

This product is an electrical device and can be hazardous if immersed in water. To avoid the possibility shock, do not use it while in the bathtub or shower or when you are wet. If you accidentally drop it into water, first unplug its cord (or cords) from the modular jack, and then remove the equipment from the water.

INSTALLATION

- Plug one end of coiled cord to the jack of handset and the other end to the jack of the base.
- Plug one end of flat cord to line jack in the base and the other end to the wall jack.

OPERATION INSTRUCTION

RECEIVER SWITCH (HI/MI/LO)

- Slide the [RECEIVER] switch to 'HI' position for the highest handset volume, 'MI' for medium volume and 'LO' position for the lowest handset volume

SPEAKERPHONE (MAX to MIN) SWITCH

- Slide the [SP-PHONE] switch to 'MAX' position for the highest speaker volume and 'MIN' position for the lowest speaker volume.

RINGER (HI/LO/OFF) SWITCH

- Slide the [RINGER] switch to 'HI' position for high ringer volume and 'LO' position for low ringer volume.
- Slide the [RINGER] switch to the 'OFF' position to turn the ringer off. The ringer will not be activated by any incoming calls. (Ringer NEON will still flash to remind you if there is incoming call) Don't forget to turn the ringer 'ON' when you are ready to receive calls; otherwise, you will not hear any ringing sound.

INCOMING CALL NEON INDICATOR

The bulb will flash if there is an incoming call.

IN USE INDICATOR

This bulb will light if the handset is off hook, Speakerphone key is "ON" or if the phone is on "HOLD" showing you the phone is connected properly and will remind on until the phone is off properly

MAKING CALLS AS NORMAL TELEPHONE

- Pick up the handset or press [SP-PHONE] key to listen for a dial tone.
- Dial your call.

RECEIVING CALLS AS A NORMAL TELEPHONE

When the phone rings:

- Lift the handset and speak into the mouth piece of the handset or
- Press [SP-PHONE] key to speak
- Hang up the handset or press [SP-PHONE] key to release the telephone line when conversation is completed.

'911' EMERGENCY ONE-TOUCH DIALING

For the emergency dialing of '911', just pick the handset or press [SP-PHONE] to get a dial tone, then press [911] button to dial out the call directly.

LAST NUMBER REDIAL

- Lift the handset or press [SP-PHONE] to get the dial tone
- The last number you called can be redialed automatically by using [REDIAL]. This is useful especially if line is busy.
- Redial functions will not be executed if any other key is entered prior to redial key entry.

FLASH (Call Waiting)

For Call Waiting or when in an office equipped with PBX service, this telephone makes it easy to transfer calls

1. Ask the caller to wait
2. Press [FLASH] button for Call waiting
3. You can now answer the 2nd call , by pressing [FLASH] again you can go back to the 1st call.
4. Or for PBX equipped dial the extension number which the caller intended
5. When the person answers, just replace the handset back onto the phone
6. If you receive a busy call or there is nobody answer, press [FLASH] button to re-connect to caller

MUSIC ON HOLD FUNCTION

- During the conversation, to put your party on music “hold”, press [HOLD] button. Your caller will be placed on “hold” while he or she listens to music.
- To release the “hold”, lift the handset or press the [SP-PHONE] button and speak to the calling party

STORE ON/OFF SWITCH

- Slide the “STORE” switch to ‘ON’, position the one-touch or two-touch memories will be able to be programmed.
- Slide the “STORE” switch to ‘OFF’, position the one-touch or two-touch memories will not be able to be programmed.

TO STORE 2 ONE-TOUCH MEMORIES

- Lift the handset or press [SP-PHONE] button
- Press [STORE] button
- Enter the number you want to store
- Press M1 or M2
- Replace the handset or press [SP-PHONE] button

TO STORE 10 TWO-TOUCH MEMORIES

- Lift the handset or press [SP-PHONE] button
- Press [STORE] button
- Enter the number you want to store
- Press [AUTO] button
- Press a number from 0 to 9 (where the location you would like to store)
- Replace the handset or press [SP-PHONE] button

TO DIAL A NUMBER FROM 2 ONE-TOUCH (M1/M2) MEMORIES

- Lift the handset or press [SP-PHONE] button to get the dial tone
- Press the one touch button (M1/M2)

TO DIAL A NUMBER FROM 10 TWO-TOUCH MEMORIES

- Lift the handset or press [SP-PHONE] button to get the dial tone
- Press [AUTO] button first, then enter the desire location from 0-9

SAFETY INSTRUCTIONS

- This unit is an electrical device and can be hazardous if immersed in water. If you accidentally drop it into water, first unplug it from the wall jack, and then remove it from the water.
- Please keep the telephone dry and do not use it in moist places. (i.e., near a bathtub, washbowl, kitchen sink, laundry tub or swimming pool). Do not use it in rain.
- Unplug the device from the wall jack before cleaning with a damp cloth. Please do not use liquid or aerosol cleaners.
- Handle the phone carefully. Do not drop it.
- Do not use or put the unit in extreme temperatures.
- Keep the phone away from dust and dirt.
- Use the correct power batteries as indicated in the manual. Do not put batteries in a fire for such action can lead to an explosion.
- Do not modify or tamper with the telephone's internal components. Improper adjustment can cause damage and can be dangerous.

SAVE THESE INSTRUCTIONS

ITEM NUMBER 4357

FCC Number GXATE22BHT-916

FUTURE CALL LLC

For services call us Toll free on 1-888-934-CALL (2255)

E-mail help@future-call.com

Visit us on the web www.future-call.com