

FUTURE CALL

Auto Hang Up Box FC-0401



**OWNER'S MANUAL
AND
OPERATING INSTRUCTIONS**

IMPORTANT SAFETY INSTRUCTIONS

Before using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement or near a swimming pool.
5. Do not place this product on an unstable cart, stand, or table. The product may fall causing serious damage to the product.
6. Slots and openings in the enclosure and the back and bottom are provided for ventilation, to prevent overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
8. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be abused by persons walking on it.
9. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
10. Never push objects of any kind into this product through enclosure slots as they may touch voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
11. Do not disassemble this product. Take it to a qualified service technician or center when repair work is required. Opening or removing covers may expose you to voltage or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
12. Unplug this product from the wall outlet and refer to qualified service personnel under the following conditions:
 - A. When the power supply cord or plug is damaged or frayed.
 - B. If liquid has been spilled into the product.
 - C. If the product has been exposed to rain or water.
 - D. If the product does not operate normally by following the operating

instructions. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and may require extensive work by a qualified technician to restore the product to normal operation.

E. If the product has been dropped or the enclosure has been damaged.

F. If the product exhibits a distinct change in performance.

13. Avoid using a telephone during an electrical storm. There may be a remote risk of electric shock from lightning.

14. Do not use the telephone to report a gas leak in the vicinity of a leak.


15. Never install telephone wiring during a lightning storm.

SAVE THESE INSTRUCTIONS

FEATURES

- Auto Hang Up Detectors and timers
- 3 Ring Volume Adjustable by Switch
- 3 Ring Tones Adjustable by Switch
- Incoming Call Bright Light Indicator
- Operate with Simple Connection to Phone Line
- In and Out RJ11 Jacks for Line and Telephone Provide for Quick Installation
- AC Adaptor Needed 6V DC
- Wall Mountable

GET TO KNOW YOUR AUTO HANG UP BOX

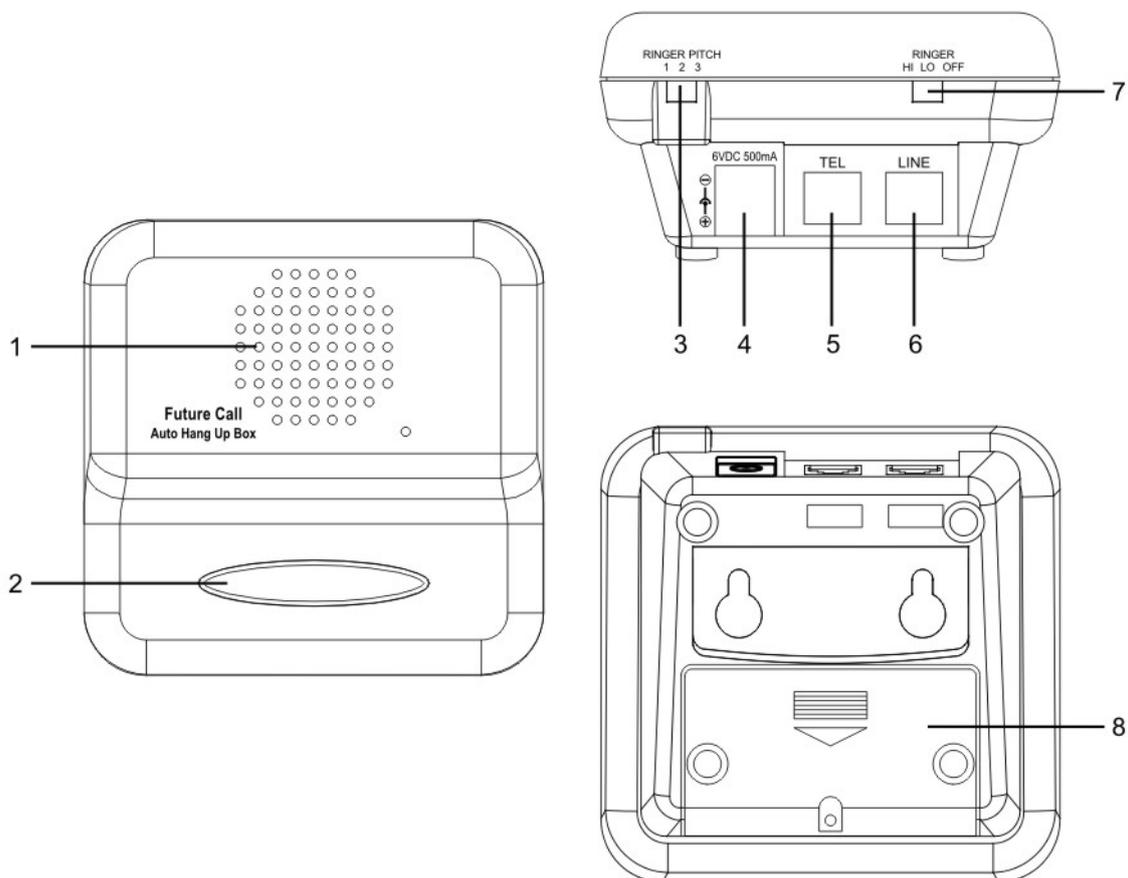

- | | |
|----------------------------------|---------------------|
| 1. SPEAKER | 5. TELEPHONE JACK |
| 2. INCOMING CALL LIGHT INDICATOR | 6. LINE JACK |
| 3. RINGER TONE SWITCH | 7. RINGER SWITCH |
| 4. DC JACK SOCKET | 8. COMPARTMENT DOOR |

INSTALLATION

Line & Telephone Cord Connection

Insert the modular plug of the line cord into the line jack at the rear of the unit, and then insert the other end into the wall jack.


Next, insert the modular plug of the telephone cord into the telephone jack at the rear of the unit, and then insert the other end into the telephone.

AC Adaptor

Insert the 6 volt DC AC adaptor into the rear of the unit and plug in the AC adaptor into a wall outlet.

Wall Mounting

Your Auto Hang Up Box is also designed to mount on a wall. Connect the wall mount bracket to the back of the box as shown below.

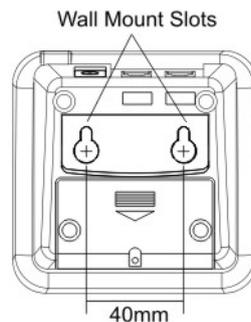

Place 2 screws into the wall then slots on the bottom of the base over the two screws heads and pull down to lock into place.

SETTING

1. Ringer Volume Control (HI/LO/OFF)

- Slide the [RINGER] switch to 'HI' position or 'LO' position to turn the ringer on. 'HI' for high volume and 'LO' for low volume
- Slide the [RINGER] switch to 'OFF' position to turn the ringer off. You still can dial out, but cannot hear ringer sound of any incoming calls via this box only.
- (Ringer LED'S will still flash to remind you there is incoming call.) Don't forget to switch the ringer to 'ON' (i.e. 'HI' or 'LO' position), otherwise, you cannot hear the ringer sound next time from this box.

2. Ringer Tone Adjustable

- Sliding the RINGERTONE switch to positions 1, 2 or 3 to select the ringer tone type.

3. Incoming Call Light Indicator

- The LED'S will light when there is any incoming calls even if the ringer switch is set to off.

FUNCTIONS

Overall Function Description

The Auto Hang Up Box will allow the phone line to remain open to calls even when the handset is not properly set down, or in the case of cordless handset, switched off. Without the Auto Hang Up Box, the phone line would remain busy, and unable to receive incoming calls.

How it works

The Auto Hang Up Box has a series of pre-set detectors that activate when the other party hangs up after a phone call.

Auto Hang Up Timer Settings

As a failsafe measure, there are an additional 4 adjustable timer settings. These settings will allow the unit to release the line and allow incoming calls after: 15 minutes, 30 minutes, 60 minutes, or unlimited.

The adjustable timer settings are set using 2 dip switches found inside the compartment at the back of the unit (See diagram below).

S1	S2	
ON	ON	60 MIN
OFF	ON	30 MIN
ON	OFF	15 MIN
OFF	OFF	UNLIMITED

OPERATIONS

When the handset is not properly set down, or in the case of a cordless handset, switched off, the Auto Hang Up Box, will sound for a period of 20 seconds, and 3 green LED's will light up underneath the red LED lens. If you hear the 20 second tone, or see the 3 green LED's on, you should properly hang up the handset. Even if you fail to hear/see the warning, the box will still disconnect the phone from the line, allowing the line to receive incoming calls. When a new incoming call is received, only the box will ring (as long the ringer switch is on) and the 4 red LED'S will flash.

Answering an incoming call

When the box is ringing, and you pick up the handset that was not properly set down, or in the case of a cordless handset, switched off, you must properly set down the handset into its cradle, or properly switch off the cordless handset, prompting the phone/cordless handset to ring. To accept the call, simply pick up the handset again or push the talk key on a cordless handset.

SERVICE

According to FCC regulation. This equipment which has been certified and registered by the FCC, may only be repaired by authorized person, the FCC certification may be voided. Should you encounter any problems, please call the FUTURE CALL LLC.

Toll-free Customer Hotline for assistance:

1-888-934-CALL, Monday - Friday between the hours of 9:00 am - 6:00 pm PST

For general inquires, you can E-Mail to help@future-call.com or visit our website at www.future-call.com

FOR WARRANTY AND OUT-OF WARRANTY SERVICE:

You may call our toll-free hot line on 1-888-934-CALL (1-888-934-2255) 9AM-6PM PST or E-mail to help@future-call.com

QUESTIONS?

STOP...don't take unit back to the store.

LOOK...for the toll-free "help" telephone number.

LISTEN... as our experts talk you through the problem.

For immediate answers to your questions regarding operation, missing parts or installation call:

FUTURE CALL LLC

HOTLINE & E-MAIL AT:

1-888-934-CALL & help@future-call.com

LIMITED WARRANTY AND SERVICE

FUTURE CALL LLC. warrants this product to be free from defective materials or factory workmanship and will replace or repair this unit or any part thereof, if it proves to be defective in normal use or service within 90 days from date of original purchase. Our obligation under this warranty is the repair or replacement of the defective instrument or any part thereof. This warranty will be considered void if unit is tampered with, improperly serviced, or subjected to misuse, negligence or accidental damage. There are no other express warranties other than those stated herein.

This warranty gives you specific legal rights, and you may also have other rights which varies from state to state.

TO OBTAIN SERVICE PLEASE E-MAIL US ON help@future-call.com OR CALL US TOLL FREE 1-888-934-CALL 9AM-6PM PST (1-888-934-2255). IF THE UNIT IS UNDER WARRANTY PROOF OF PURCHASE MUST BE PROVIDED.

Future Call LLC

For services call us. Toll free on 1-888-934-CALL (2255)

9AM – 6PM PST or E-mail help@future-call.com

Visit us on the web www.future-call.com

Made in China