

FC-2409 User Manual

Picture Speakerphone Dialer

1 Function description


- 9 photo keys and 911 key (indirect memories)
- One or Two touch Memory dialing
- Tone dialing function
- Speakerphone
- 32 digits last number redial
- Pause function (on Redial key)
- Flash function
- Electronic Mute function
- Speaker Volume control
- Ringer Hi/Lo/Off control
- In-use LED (RED)
- Ringer LED (Green)
- Wall mountable
- No Batteries or A/C adaptor needed
- The memories will be backed up for life even if disconnected the phone line.

2 Features

(See picture)

1. Dialing keypad、Memories key (0~9) + 911 key
2. Memory key (MEM)
3. Redial/Pause key
4. In-use LED / Ringer LED
5. Mute key
6. Flash key

7. Handsfree key
8. Normal / Program = N/P / One Touch = O/T switch
9. Store key at back of unit
10. Ringer volume switch
11. Phone Jack
12. Line Jack
13. Handsfree volume control

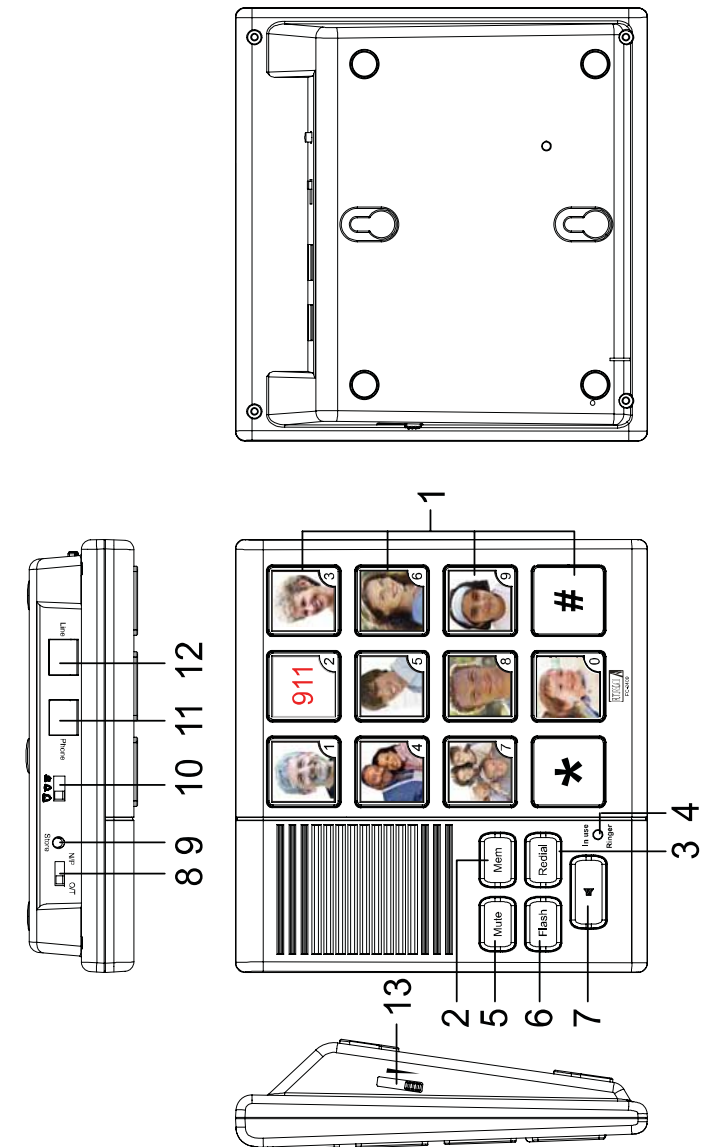

3 Installations



- Connect the telephone Line Cord to the Line jack and the wall socket.
- To connect a parallel phone if needed plug the phone line cord into the Phone jack socket.

4 Operations

During a call the In-Use LED will light up.



4.1 Storing number into one touch or two touch picture dialer

When programing switch (8) must be in N/P position

- Press  Handsfree Key to turn on handsfree function.
- Press **Store** key at back of unit.
- Entering the desired phone number.
- Press **Store** key at back of unit.
- Press a numerical key (0~ 9) for 10 indirect / direct memories.
- Press  Handsfree Key again to turn off handsfree function.

4.2 Disconnecting 911 Key

As the 911 key is preprogramed from the factory, if you need to disconnect the 911 key you may program any other number you wish or just the digit “1” into this key by the following.....

- Press  Handsfree Key to turn on handsfree function.
- Press **Store** key at back of unit.
- **Entering “1” or any number you wish to store.**
- Press **Store** key at back of unit.
- Press **911** key.
- Press  Handsfree Key again to turn off handsfree function.


4.3 Taking a call

- When a call comes in, the phone will ring.

Use Ringer volume switch select Hi / Lo / Off position to adjust the volume of the ringer.

- Press  Handsfree Key to take the call.

4.4 Making a call

- Press  Handsfree Key to turn on handsfree function.
- Enter the telephone number you wish to dial

OR


- Press **Mem** key.
- Press an indirect Picture memory key (0~9) **when the switch (8) is in N/P position**

OR


- Press a direct Picture memory key (0~9) **when the switch (8) is in O/T position**

During a call, Use speaker volume control switch to adjust the Speakerphone Volume.

4.5 Ending a Call

- When you finish your conversation, Press  Handsfree Key to end the call...

4.6 Redialing

- Press  Handsfree Key to turn on handsfree function.
- Press **Redial** key to call previously dialed number.

4.7 Pause function

For some network services such as home banking or PABX's which give a secondary dial tone before further dialing, it may be necessary to insert a pause between digits.

- Press **Redial** key to add 3.6 seconds pause during dialing a phone number.
- Press **Redial** key to add 3.6 seconds pause during storing a number into memory keys

4.8 Flash Function

Press **Flash** key the phone line will break and disconnected. It is for Call-Waiting or other functions offered by local telephone company.

4.9 Mute Function

During your phone call, if you want a private conversation not to be heard by the other party on the line.

- Press the **Mute** key.
- To continue your phone call, press the Mute key again.

SERVICE

According to FCC regulation. This equipment which has been certified and registered by the FCC, may only be repaired by authorized person, the FCC certification may be voided. Should you encounter any problems, please call the FUTURE CALL LLC. Toll-free Customer Hotline for assistance:

1-888-934-CALL (2255) Monday - Friday between the hours of 9:00 am - 6:00 pm PST

For general inquiries, you can e-mail to help@future-call.com or visit our website at **www.future-call.com**

FOR WARRANTY AND OUT-OF WARRANTY SERVICE:

You may call our toll-free hot line on 1-888-934-CALL (2255) 9 AM-6 PM PST or E-mail to help@future-call.com

QUESTIONS?

STOP...doesn't take unit back to the store.

LOOK...for the toll-free "help" telephone number.

LISTEN... as our experts talk you through the problem.

LIMITED WARRANTY AND SERVICE

FUTURE CALL LLC. warrants this product to be free from defective materials or factory workmanship and will replace or repair this unit or any part thereof, except batteries, if it proves to be defective in normal use or service within 90 days from

date of original purchase. Our obligation under this warranty is the repair or replacement of the defective instrument or any part thereof, except batteries.

This warranty will be considered void if unit is tampered with, improperly serviced, or subjected to misuse, negligence or accidental damage. There are no other express warranties other than those stated herein.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. TO OBTAIN SERVICE PLEASE E-MAIL US ON help@future-call.com OR CALL US TOLL FREE 1-888-934-CALL (2255) 9 AM-6 PM PST (IF THE UNIT IS UNDER WARRANTY PROOF OF PURCHASE MUST BE PROVEN