



USER'S MANUAL

Corded Telephone with Talking CID and Talking keypad



FC-3110

INTRODUCTION

Thank you for purchasing our newest Caller ID phone. This manual is designed to familiarize you with this phone. To get the maximum use from your new phone, we suggest that you read this instruction manual carefully before using.

SAFETY INSTRUCTION

When using your telephone equipment, the following basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons:



1. Read, understand and follow all warnings and instructions
2. Unplug the product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a soft damp cloth for cleaning.
3. Do not place this product on unstable surfaces. The product may drop, causing serious damage to the product.
4. Do not overload wall outlets and extension cords as this can result in fire or electric shock.
5. Never push foreign objects of any kind into this product through cabinet slots as they may affect dangerous voltage points or short circuit parts that could result in fire or electric shock. Never spill liquid of any kind on the product.
6. Avoid moving or disconnecting this unit during a heavy storm, as there may be a remote risk of electric shock from lightning and thunder.
7. Unauthorized persons cannot open or service even if there is a defect with the unit. This will void the warranty, please send to service center for any defects.

FEATURES

- FSK/DTMF compatible with auto-detection
- 16-digit LCD display
- Emergency number key(911) and the number can be changed
- 66 incoming number memories and 20 outgoing number memories
- 16 kinds of ringing tone for selection
- 10 two-touch memories
- Hold with 6 kinds of music selectable
- Talking incoming caller's number and Talking Keypad function
- Do Not Disturb function
- Transfer function between parallel phones (using 2 similar models)
- Pre-dial and edit function
- Redial function
- 5 sets of alarm clock
- 8 levels of LCD contrast adjustable
- Set PABX code
- Pulse/Tone dialing selection

- 4 levels of hands-free volume for selection
- 3 levels of handset volume for selection
- Ringing volume 3 levels(HI/LO/OFF) for selection
- Baby call function
- Off Line Hook Detection
- LCD backlight function
- Thunder-proof and anti-dialing from parallel phones function
- Hands-free dialing and speaking function
- In use LED indicator
- New incoming call and Ringer Indicator

LOCATION DESCRIPTION

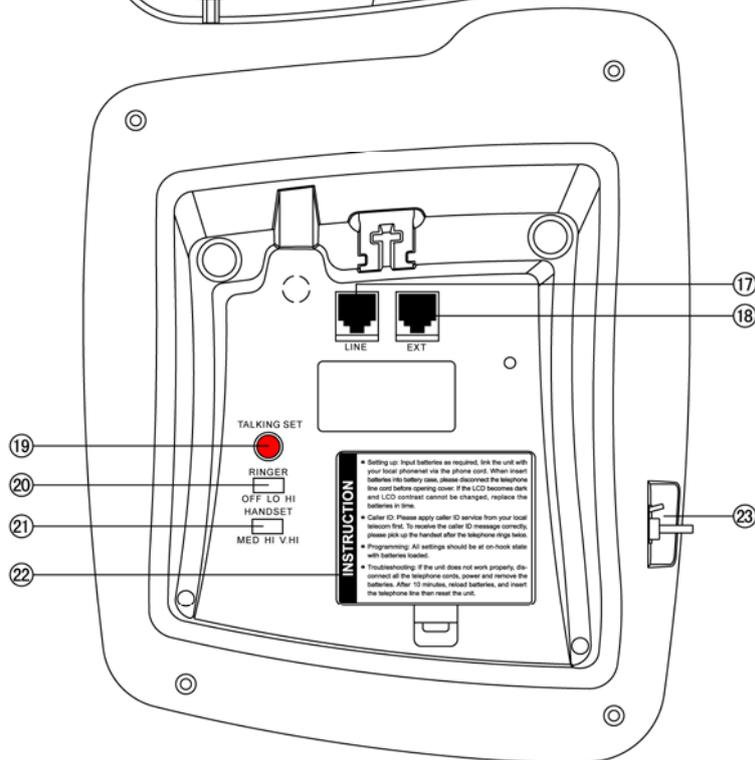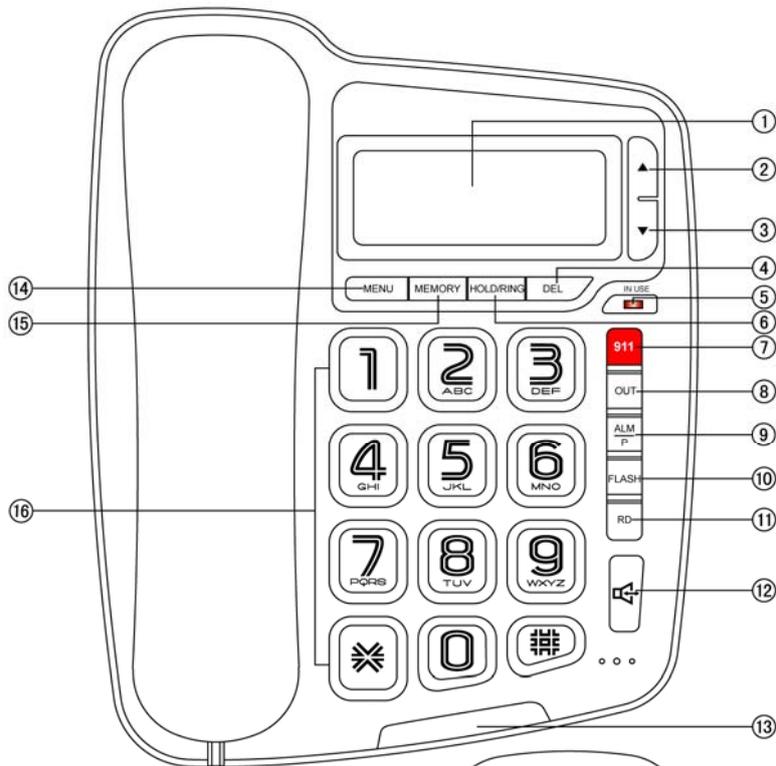

- | | | | | |
|-------------------------|-------------------------|-------------------------|-------------------------|-------------------------|
| ① LCD | ⑥ HOLD/RING | ⑪ RD | ⑬ RING/NEW LED | ⑮ NUMERICAL KEY |
| ② UP | ⑦ 911 | ⑫ H.F | ⑭ EXT | ⑯ TALKING SET |
| ③ DOWN | ⑧ OUT | ⑬ MENU | ⑰ TALKING SET | ⑲ RINGER(OFF/LO/Hi) |
| ④ DEL | ⑨ ALM/P | ⑭ MEMORY | ⑱ HANDSET (MED/Hi/V.HI) | ⑳ BATTERIES COMPARTMENT |
| ⑤ IN USE LED | ⑩ FLASH | ⑮ BATTERIES COMPARTMENT | ㉑ HANDSET SOCKET | |
| ⑥ HOLD/RING | ⑰ HANDSET (MED/Hi/V.HI) | | | |
| ⑦ 911 | ⑲ RINGER(OFF/LO/Hi) | | | |
| ⑧ OUT | ㉑ HANDSET SOCKET | | | |
| ⑨ ALM/P | | | | |
| ⑩ FLASH | | | | |
| ⑪ RD | | | | |
| ⑫ H.F | | | | |
| ⑬ RING/NEW LED | | | | |
| ⑭ EXT | | | | |
| ⑮ NUMERICAL KEY | | | | |
| ⑯ TALKING SET | | | | |
| ⑰ TALKING SET | | | | |
| ⑱ HANDSET (MED/Hi/V.HI) | | | | |
| ⑲ RINGER(OFF/LO/Hi) | | | | |
| ⑳ BATTERIES COMPARTMENT | | | | |
| ㉑ HANDSET SOCKET | | | | |

GETTING STARTED

1. The unit requires 3×1.5V AA alkaline batteries. The batteries are only for the talking functions, alarm and the LCD backlight, THIS PHONE WILL WORK FULLY WITHOUT BATTERIES. Open the battery compartment cover and insert the batteries in the right polarity, then close the cover please use alkaline batteries. The time should be displayed on the liquid crystal screen after the batteries are inserted.
2. Insert one end of the line cord to the line jack of the base and the other end to the wall outlet of exchange.
3. Connect one end of the curly cord to the handset and the other end to the base of the telephone.
4. Set the dialing mode to correct mode according to the directions from your local telecom.
5. Apply for the caller ID from your local telecom office.

RECEIVING A CALL

1. When a call comes, the telephone rings, the **RING/NEW** LED is blinking, and the LCD displays the seq. number of the call, the date, time, incoming number and the **NEW** icon.
2. For repeat incoming call, the LCD displays **REP** icon.
When the incoming memory is full, the latest incoming number replaces the oldest number in the memory.

NOTE: For the phone to display incoming numbers and other information, you must have an active Caller ID subscription with your service provider.

➤ From the handset

1. Pick up the handset and talk to the other party.
2. When finished, return the handset to the base.

➤ Switching to speakerphone

1. When using the handset, press  key and return the handset to the base.
2. When finished, press  key again.

➤ From the speakerphone

1. When the telephone rings, press  key and talk to the caller. For the other party to hear your voice clearly, speak into the speaker from a distance of 32cm or less.
2. When finished, press  key again.

NOTE:

Generally telecom transmits the incoming message between the first ring and the second ring. So please answer the phone after the second ring.

MAKING A CALL

➤ From the handset

1. Pick up the handset.

2. When you hear the dial tone, dial the desired number.
3. The telephone will start to time the conversation after 6 seconds.
4. When finished, return the handset to the base.

➤ **From the speakerphone**

1. Press  key
2. When you hear the dial tone, dial the desired number.
3. The telephone will start to time the conversation after 6 seconds.
4. When finished, press  key again.

➤ **Pre-dialing function**

1. When the handset is on the base, dial the desired number.
2. If a mistake is made, use the **DEL** key to delete.
3. Press  key or pick up the handset, the number will be dialed automatically.

➤ **Redial**

1. Pick up the handset or press  key,
2. Press **RD** key, the last dialed number will be dialed again

REVIEWING, CALLING BACK AND DELETING INCOMING NUMBERS

➤ **Reviewing**

In on-hook state, press **▲** or **▼** key to scroll through and review the numbers.

➤ **Calling back**

In on-hook state, scroll to the desired number, press  or **RD** key or pick up the handset, the number is dialed out. Or press **RD** key twice, the telephone will add the long distance code ahead the number automatically and then dial back.

NOTE: If the PABX code is set, the telephone will detect and add the PABX code before the number automatically and then dial back. The PABX code will be dialed first, followed by a 2 seconds pause and then the telephone number.

➤ **Deleting**

In on-hook state, when the desired number is shown, press **DEL** key, the number is deleted. Or press and hold **DEL** key for 3 seconds, all the incoming numbers will be deleted.

REVIEWING, CALLING BACK AND DELETING OUTGOING NUMBERS

➤ **Reviewing**

In on-hook state, press **OUT** key, then repeatedly press **OUT** key to review the outgoing numbers one by one.

➤ **Calling back**

In on-hook state, press **OUT** key to review the desired number, then press  or **RD** key or pick up the handset, and the number is dialed out.

➤ **Deleting**

1. In on-hook state, press **OUT** key to scroll to the desired number.
2. Press **DEL** key and the number is deleted
3. Or press and hold **DEL** key for 3 seconds, all numbers will be deleted.

NEW INCOMING CALL AND RINGER INDICATOR

New incoming call and ringer indicator is the same LED, when a new call comes in, the **RING/NEW** LED is blinking. When a new number has not been reviewed, the LED is blinking in 4s interval.

SETTING MENU

➤ **Setting date & time**

1. In on-hook state, press **MENU** key, LCD displays **SET 1 DATE**. Press **MENU** key again, the year flashes on the LCD.
2. Press **▲** or **▼** key to edit the year.
3. Press **MENU** key to confirm and enter into the month setting.
4. Repeat the above procedure for month setting.
5. Repeat the above procedure for date and time setting.

➤ **Setting Local Area Code**

1. In on-hook state, press **MENU** key and press **▲** key, LCD displays **SET 2 CODE**, press **MENU** key again, LCD displays **CODE -----** and first “-” flashes.
2. Press **▲** or **▼** key to edit the flashing code.
3. Press **MENU** key to confirm and enter the next flashing code setting.
4. Repeat the above procedure for the rest code setting.

NOTE: E.g. Area code number is set to “**206---**”, when the incoming call comes for “**2061169600**”, the telephone auto filter area code and LCD displays “**1169600**”

➤ **Setting Long Distance Code**

1. In on-hook state, press **MENU** key and press **▲** key twice, LCD displays **SET 3 LCODE**, press **MENU** key again, LCD displays **-----0** or the preset codes, press **DEL** key to delete it.
2. Input the long distance codes using the numerical keypad. A maximum of 16 digits can be input.
3. Press **MENU** key to confirm.

➤ **Adjusting LCD Contrast**

1. In on-hook state, press **MENU** key and press **▲** key three times, LCD displays **SET 4 LCD**, Press **MENU** key again, LCD displays **LCD 5**
2. Press **▲** or **▼** key to adjust the LCD contrast, a total of 8 levels can be selected.
3. Press **MENU** key to confirm and exit.

➤ **Setting Flash Time**

1. In on-hook state, press **MENU** key and press **▲** key four times, LCD displays **SET 5 FLASH**, press **MENU** key again, LCD displays **FLASH 600**
2. Press **▲** or **▼** key to edit the flash time to 100, 300, 600 and 1000ms.
3. Press **MENU** key to confirm.

➤ **Setting PABX Code**

1. In on-hook state, press and hold **DEL** key 3 seconds to set PABX code, LCD displays **PCODE -** and the “-” flashes.
2. Press **▲** or **▼** key to set PABX code from 0 to 9 or -.
3. If choose “-”, it means no PABX code has been set.
4. Press **MENU** key to confirm and quit.

➤ **Setting Alarm Clock**

1. In on-hook state, press **ALM/P** key once, LCD displays **12-00 AL1**,
2. Press **▲** or **▼** key to select ON or OFF. LCD displays “**ALM**” icon when the alarm is set to ON.
3. Press **MENU** key, value “**12**” starts to flash.
4. Press **▲** or **▼** key to set the alarm hour and press **MENU** key to confirm and enter into alarm minute setting.
5. Press **▲** or **▼** key to edit alarm minute and press **MENU** key to confirm and enter into the next group alarm clock setting.
6. Repeat the above procedure to set additional alarms.
7. End user can press any keys to turn off the alarm when it is sounding.

NOTE: The first 3 groups of alarm clock will be repeated periodically every day while the last 2 groups of alarm clock is effected one time.

VOICE TALKING SETTING

Please insert the batteries to power the telephone first, and then use the two features below.

For the first to use this telephone, the voice talking function is at ON state.

➤ **Voice talking of caller's number**

1. In on-hook state, press and hold **TALKING SET** button for 3 seconds at the bottom of the telephone base, LCD displays **TALK 1 ON(OFF)** and “**1**” flashes.
2. Press **▲** or **▼** key to select the talking times among 1~3.
3. Press **TALKING SET** button again, “**ON**”(or “**OFF**”) flashes.
4. Press **▲** or **▼** key to turn on the voice talking of caller's number
5. Press **MENU** key to confirm and exit.

After this function has been turned on, the phone will talk the caller's number for 1~3 times when a call comes.

NOTE: To use Voice Talking of caller's number function, you must have an active Caller ID subscription with your service provider.

To turn off voice talking, press and hold **TALKING SET** button for 3 seconds, then press **TALKING SET** button again, turn it off using ▲ or ▼ key and press **MENU** key to confirm and exit.

➤ **Voice talking of pre-dialed number**

1. In on-hook state, press and hold **TALKING SET** button for 3 seconds, LCD displays **TALK 1: ON(OFF)**.
2. Press **TALKING SET** button twice, LCD displays **PDIAL ON(OFF)** and “ON”(or “OFF”) flashes.
3. Press ▲ or ▼ key to turn on the voice talking of pre-dialed number
4. Press **MENU** key to confirm and exit.

After this function has been turned on, the phone will sound the dialed number when you pre-dial in on-hook state.

NOTE: To turn off voice talking press and hold **TALKING SET** button for 3 seconds, then press **TALKING SET** button twice again, turn it off using ▲ or ▼ key and press **MENU** key to confirm and exit.

TRANSFER BETWEEN PARALLEL PHONES

➤ **Setting the paging number**

1. In on-hook state, press and hold **MENU** key, LCD displays **EL--**
2. Key in “*” and the paging number (example “*1”and “*2”), use **DEL** key to edit
3. Press **MENU** key to confirm and exit.

➤ **Transferring a call to paralleled phones:**

When a call comes, use one of paralleled phones to answer. Press “*” and the paging number that was set in the other telephone to where you want to transfer the call (the operation should be done within 30 seconds after you answer the call using the parallel phone. If the time is more 30 seconds, the transfer operation is not available), the other telephone rings, pick up its handset or press  key to answer the incoming call.

NOTE: Please use same series telephones for the above feature to work. Any special services starting with “*” offered by your service provider may not function properly.

To get the best effect of this function, you should insert the batteries before using.

ANTI-DIALING FROM PARALLEL PHONES FUNCTION

1. In on-hook state, press and hold # key for 3 seconds, LCD displays **SPI OFF**
2. Press # key again, LCD displays **SPI ON**
3. Press **MENU** key to confirm.

When the anti-dialing is set to ON, users who want to dial using an extension(parallel phone) via the same line will hear a “DI-DI, DI-DI” beep continuously and will not be allowed to make a call.

SETTING RINGING TONE AND ADJUST RINGING VOLUME

There are 16 kinds of ringing tone for selection:

1. In on-hook state, press **HOLD/RING** key, LCD displays **ring 02 db3**
2. Press **HOLD/RING** to select the desired ringing tone.
3. Press **▲** or **▼** key to adjust ringing volume.
4. Press **MENU** to confirm and exit.

NOTE: The volume ranges from dB0-dB3, with dB3 being the loudest volume, and dB0 is “**Do Not Disturb**” mode. If the phone is set at DND mode, the telephone will not ring when there is an incoming call.

Also you can slide the **RINGER(OFF/LO/HI)** switch at the bottom to choose the volume.

DO NOT DISTURB AT REAL TIME

When there is calling in and the telephone is ringing, press **DEL** key, it will stop ringing.

ADJUST HANDS-FREE VOLUME

In hands-free mode, press **▲** or **▼** adjust the hands-free volume. LCD displays the volume level, total 4 levels for adjustment.

ADJUST HANDSET VOLUME

Slide the **HANDSET(MED/HI/V.HI)** switch at the bottom to choose the appropriate handset volume.

SELECTING PULSE OR TONE DIALING MODE

1. In on-hook state, press and hold ***** key for 3 seconds, LCD displays **T**, then dialing mode is set as Tone.
2. Repeatedly press ***** key to adjust dialing mode as **P**(Pulse) or **T**(Tone).
3. Then press **MENU** key to confirm.

HOLD ON MUSIC

➤ Hold music selection

There are 6 kinds of hold music for selection

1. In off-hook or hands free state, press **HOLD/RING** key
2. Press **OUT** key to select the desired music on hold. The music is played at the same time.
3. Press **▲** or **▼** key to adjust the volume of hold music, a total of 4 levels.
4. Press **HOLD/RING** key to quit.

➤ When talking over handset, press **HOLD/RING** key to enter the hold mode and the hold music is sent out. In hold mode

1. Press **HOLD/RING** key to release hold mode and continue to talk over handset, or

2. Hang up handset, it enters hands-free hold mode.

➤ **When speaking in hands-free mode, press HOLD/RING key to enter the hold mode and the hold music is sent out. In hold mode**

1. Pick up handset to talk over handset, or

2. Press  key to quit hold mode and talk at hands-free mode.

EMERGENCY NUMBER (911)

In on-hook or off-hook state, press **911** key at the keypad, the emergency number 911 will be dialed out automatically.

Note if you wish just to disconnect this key just program the digit "1" as your desired number, the procedure is as following:

➤ **To change the number stored in the 911 key**

1. Pre-dial the desired number that you wish to store.

2. Press **MEMORY** key

3. Press **911** key, the number will be stored in the **911** key.

➤ **To make a call from the 911 key**

In off-hook or on-hook state, press **911** key to dial the stored number out directly.

Or in on-hook state, press **MEMORY** key firstly, then press **911** key, LCD displays the stored number, press  or **RD** key or pick up the handset to dial it out directly, or press **RD** key twice to dial out number ahead with long distance code.

NOTE: the function of the **911** key is invalid when the telephone is at BABY LOCK ON state.

TWO TOUCH MEMORY OPERATION

➤ **Store the number in two-touch memory**

1. Pre-dial the desired number that you wish to store.

2. Press **MEMORY** key

3. Press one of numeric keys (0-9) on the keypad. The telephone number is now stored under the selected number on the keypad.

➤ **Make a call from two-touch memory**

In on-hook state, press **MEMORY** key + numeric key (0-9), LCD displays the stored number, press  or **RD** key or pick up the handset to dial it out directly, or press **RD** key twice to dial out number ahead with long distance code.

In off-hook state, press **MEMORY** key + numeric key (0-9), the stored number will be dialed out directly.

BABY CALL/BABY LOCK/OFF LINE FUNCTION

➤ **BABY CALL function**

At on-hook state, press and hold **RD** key for 3 seconds to come into baby call function setting.

LCD displays **BABYCALL OFF(ON)**, press ▲ or ▼ key to set it ON or OFF, press **MENU** key to confirm. If you select ON, LCD displays **NO CODE** (or the preset baby call number, press **DEL** key to cancel), input baby call number using numerical key and press **MENU** key to confirm. After set baby call function to ON state, pressing any key except **RD** key or picking up handset will dial out the baby call number automatically.

When baby call function is ON state, you can still answer the incoming call.

NOTE: 1. If you don't use the function, enter baby call function setting as per above operation and select **BABYCALL OFF**, press **MENU** key to confirm.

2. Also you can press and hold **TALKING SET** button for 3 seconds at on-hook state, then press **TALKING SET** button three times again to enter to BABY CALL function.

➤ **BABY LOCK function**

At on-hook state, press and hold **RD** key for 3 seconds, LCD displays **BABYCALL OFF(ON)**, then press **RD** key once to enter into BABY LOCK setting, and the LCD displays **BABYLOCK OFF(ON)**, press ▲ or ▼ key to set it ON or OFF, then press **MENU** key to confirm.

After set baby lock function to ON state, pressing any number will invalid except emergency numbers 110, 112, 119, 120, 800 and 999.

NOTE: Also you can press and hold **TALKING SET** button for 3 seconds at on-hook state, then press **TALKING SET** button four times again to enter to BABY LOCK function.

➤ **OFF LINE function**

At on-hook state, press and hold **RD** key for 3 seconds, LCD displays **BABYCALL OFF(ON)**, then press **RD** key twice to enter into OFF LINE setting, and the LCD displays **OFFLINE OFF(ON)**, press ▲ or ▼ key to set it ON or OFF, then press **MENU** key to confirm.

After you set OFF LINE function to ON state:

If you do not put the handset on the cradle properly when in handset mode, or you do not close / turn off the speakerphone after your conversation has ended, the telephone will detect the busy tone automatically, and return to standby mode this will allow the telephone to ring at the next incoming call, if then you pick up the handset, the phone will continue to ring then you will need to replace the handset back on the cradle and pick it up again to answer the call or if the speakerphone was not closed you just press speakerphone key  once or pick up the handset to answer the call.

NOTE: Also you can press and hold **TALKING SET** button for 3 seconds at on-hook state, then press **TALKING SET** button five times again to enter to OFF LINE function.

LOW BATTERY DETECTION

When the voltage is lower than 3.9V, LCD displays a battery icon to remind the user to replace the batteries.

LCD BACKLIGHT FUNCTION

The backlight is turned on when receiving an incoming call, dialing, pressing any key or in MUSIC HOLD mode. It will fade off if the telephone is left idle for several seconds.

NOTE: If batteries are not inserted, there will be no LCD backlight function.

FLASH FUNCTION

When dialing and the line is engaged, press **FLASH** key and then press **RD** key to dial it out again.

PAUSE FUNCTION

If dial a number from PABX extension, press PABX number (normally "0" or "9") + **ALM/P** + desired number. When redial, need not dial PABX number and **ALM/P** key, just press **RD** key.

NOTES

Please unplug telephone line when installing / replacing batteries.

TROUBLESHOOTING

? **No voice**

+ Check if the handset is on the phone or if the line has terminated.

? **Receive only**

+ Check if P/T mode is properly set.

? **Rusty batteries or leakage**

+ Remove the rust or wipe away the leakage.

? **Noise**

+ Check if the circuit is spoilt. (Change the circuit)

Check if the connector is wet or rusty (Change the connector)

? **Ring once then disconnect when receiving a call. Dialing function is still available**

+ Check if connector is in a moist environment.

Check if too many extensions are used together or the quality of extension is not good enough (Change the bad extension)

? **LCD become dim**

+ Check if LCD contrast is properly set or if the batteries are weak. (Adjust LCD contrast, if the LCD is still dim, replace the batteries.)

? **No ring**

+ Check if the ringing volume is set at dB0, reset it.

? **Most of the functions failed**

+ Check if the batteries are strong enough. (Change the batteries)

If batteries are OK (Remove the battery, unplug the lines and reinstall after 10 minutes)

NOTE: Due to continuous product development all features and specifications are subject to change without prior notice.

On the bottom of this equipment is a label that contains, among other information, a product identifier of US:

FCC # 4V4VKTE16BFC-2004 Ren # 1.1B

If requested, this number must be provided to the telephone company.

LIMITED WARRANTY AND SERVICE

FUTURE CALL LLC. warrants this product to be free from defective materials or factory workmanship and will replace or repair this unit or any part thereof, except batteries, if it proves to be defective in normal use or service within 90 days from date of original purchase. Our obligation under this warranty is the repair or replacement of the defective instrument or any part thereof, except batteries. This warranty will be considered void if unit is tampered with, improperly serviced, or subjected to misuse, negligence or accidental damage. There are no other express warranties other than those stated herein.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

TO OBTAIN SERVICE PLEASE E-MAIL US ON help@future-call.com OR CALL US TOLL FREE 1-888-934-CALL 9AM-6PM PST (1-888-934-2255). IF THE UNIT IS UNDER WARRANTY PROOF OF PURCHASE MUST BE PROVEN.