Size: 315*148. 5mm

8.Handset Volume Switch
Choose the “HANDSET VOLUME SWITCH” to adjust to 'LO' or 'HI' position. The default setting is “LO” position

9. Storing 10 two Touch Memories
Pick up the handset: →Make sure STORE on/off switch is “ON”
Press STORE button→Input Number→Press STORE AGAIN→Press Memory location 0 9 →replace handset.

10. Making a call from the 2 touch memories
Pick up the handset
Press AUTO button →Press Memory Location 0 9 →your number will be dialed out.
Note: If you need to disconnect the 911 key you may program any other number you wish or just the digit “1” into this key by following the below.
Make sure STORE on/off switch is “ON”
Pick up the handset: →Press STORE button→Input Number→Press 911 key →replace handset.

11. Wall Mounting
Use a 6 mm drill and 27mm screw to hook when wall mounted.
Remove the pin under the handset flip and install it again in the same place.

Trouble Shooting

Called party hears no or weak voice.
Check the handset and cord connection

No function
Unplug the phone, disconnect all cords and reinstall the phone as written in the manual.

No ringing or dial tone
Check the line cord connection.
Check the handset cord connection.
Check if the telephone line or PABX line is working.

One ring only and the line is broken
Check the jumper box.
Check if there are parallel units on the same line if so remove them.

Maintenance

NOTICE: If your home has specially wired alarm equipment connected to the
Telephone line; ensure the installation of this equipment FC-2511 does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.
WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SERVICE
According to FCC regulation. This equipment which has been certified and registered by the FCC, may only be repaired by authorized person, or else the FCC certification may be voided.
Should you encounter any problems, please call the FUTURE CALL LLC.
Toll-free Customer Hotline for assistance:
1-888-934-CALL, Monday - Friday between 9:00 am - 6:00 pm PST
For general inquires, you can E-Mail to info@future-call.com or visit our website at www.future-call.com

FOR WARRANTY AND OUT-OF WARRANTY SERVICE:
You may call our toll-free hot line on 1-888-934-CALL (1-888-934-2255) 9AM-6PM PST or E-mail to help@future-call.com
QUESTIONS?
STOP...don't yet take unit back to the store.
LOOK...for the toll-free “help” telephone number.
LISTEN... as our experts talk you through the problem.

For immediate answers to your questions regarding operation, missing parts or installation call:
FUTURE CALL LLC
HOTLINE & E-MAIL AT:
Toll free 1-888-934-CALL (2255) or help@future-call.com

FUTURECALL

FC-2907

User`s Manual

This manual is made in order to familiarize you with your phone. In order to get maximum benefits of this product. we suggest that you read the User's Manual carefully before using your phone.

FC-2907 User's Manual

FeaturesHands free function
Redial function
Flash function
911 Key
10 two touch memories
In use indicator
Ringer Indicator
Ringer Volume Hi-Lo selectable
Store on/off switch
Handset Volume Lo/HI switch
Speaker Volume Lo/Hi switch
Wall mountable

Safety Instructions
1)Read and understand all instructions before using this phone. Follow the warnings and instructions marked on the product.
2)This unit is an electrical device does not use the phone when it is drenched in water or liquids. Unplug the line cord by disconnecting the modular jack before removing the phone from the liquid.
3)Do not place the phone near by bathtub shower or similar Environments, to avoid electrical shock.
4)Unplug the phone before cleaning it. Do not use liquid cleaners or aerosol cleaners.
5)Do not use the telephone to report a gas leak or in the vicinity of the leak.
6)Do not open the equipment.

Installation
1)Put the telephone in a dry, ventilated and non-erode gas place.
2)After installing the coil cord to the handset and base unit, connect the base unit to the telephone connection outlet using the straight line cord. Pick up the handset and you will hear the dial tone from the Exchange. This means the phone is ready for use.

Package Items

Base unit	Handset	Coil cord	Straight line cord	User’s manual
1	1	1	1	1

Phone Structure

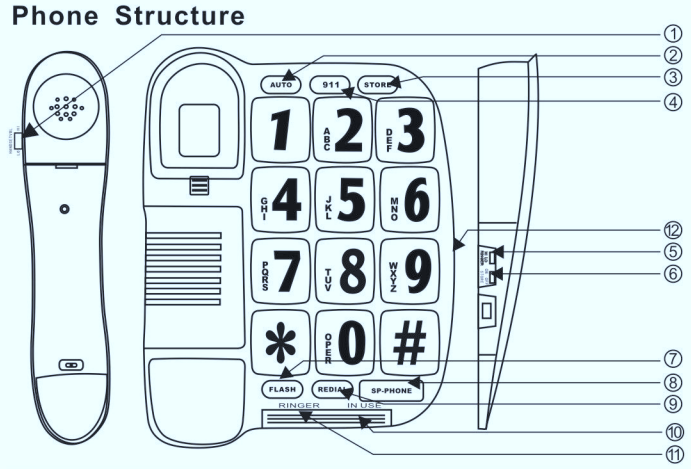

1	HANDSET VOLUME SWITCH: LO-HI
2	AUTO
3	STORE
4	911
5	RINGER VOLUME SWTICH: HI-LO
6	STORE ON/OFF SWITCH
7	FLASH
8	SP-PHONE
9	REDIAL
10	IN USE LED
11	RINGER LED
12	SPEAK VOLUME SWITCH: LO-HI

Use Method

1.To Receive a call
When the phone is ringing, pick up the handset or press SP-PHONE button for conversation.
Replace the handset well or press the SP-PHONE button after the call is finished.

2.Hands free function
Press SP-PHONE to dial and to talk by speakerphone.
When a new call comes, press SP-PHONE to start a conversation, press it again to end the call

3.FLASH
When there is an engaged tone or a wrong number, you can press FLASH button to hang up and make the next call. The FLASH button is also a useful feature for special telephone services such as call waiting and three party calling. Press briefly, release and perform the custom call procedure.
NOTE: Call waiting is a service of your local telephone company.

4.REDIAL
Pick up the handset and then press REDIAL key to dial out the last dialed number automatically.

5.STORE ON/OFF SWITCH
When the switch is in the “ON” position, you can program the two touch memories and when the switch is in the “OFF” position, you can not program the memories at all. Make sure this switch is in the “OFF” position after you have stored all your memories. The default setting is “ON” position

6. RINGER SWITCH
Choose the “RINGER SWITCH” to 'LO' or 'HI' position you can adjust the VOLUME OF THE RINGER, the default setting is “HI” position

7. Speaker Volume Switch
Choose the “SPEAKER VOLUME SWITCH” to adjust to 'LO' or 'HI' position. The default setting is “LO” position