

FUTURE CALL

Loud Ringer Light Box FC-5683-2



**OWNER'S MANUAL
AND
OPERATING INSTRUCTIONS**

IMPORTANT SAFETY INSTRUCTIONS

Before using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement or near a swimming pool.
5. Do not place this product on an unstable cart, stand, or table. The product may fall causing serious damage to the product.
6. Slots and openings in the enclosure and the back and bottom are provided for ventilation, to prevent overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
8. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be abused by persons walking on it.
9. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
10. Never push objects of any kind into this product through enclosure slots as they may touch voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
11. Do not disassemble this product. Take it to a qualified service technician or center when repair work is required. Opening or removing covers may expose you to voltage or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
12. Unplug this product from the wall outlet and refer to qualified service personnel under the following conditions:
 - A. When the power supply cord or plug is damaged or frayed.
 - B. If liquid has been spilled into the product.
 - C. If the product has been exposed to rain or water.
 - D. If the product does not operate normally by following the operating

instructions. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and may require extensive work by a qualified technician to restore the product to normal operation.

E. If the product has been dropped or the enclosure has been damaged.

F. If the product exhibits a distinct change in performance.

13. Avoid using a telephone during an electrical storm. There may be a remote risk of electric shock from lightning.

14. Do not use the telephone to report a gas leak in the vicinity of a leak.


15. Never install telephone wiring during a lightning storm.

SAVE THESE INSTRUCTIONS

FEATURES

- 3 Ring Volume adjustable by Switch
- Incoming Call Bright Light Indicator
- Operate with Simple Connection to Line Phone
- In and out RJ11 jacks for Easy and Quick Installation
- No Batteries or AC Adaptor Needed
- Wall Mountable

GET TO KNOW YOUR RINGER BOX

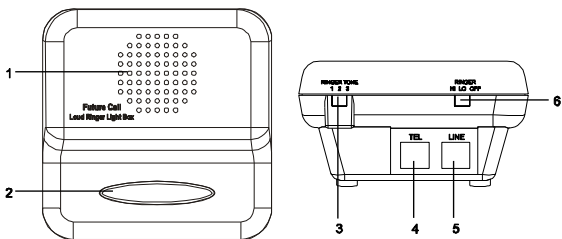

- | | |
|----------------------------------|-------------------|
| 1. SPEAKER | 4. TELEPHONE JACK |
| 2. INCOMING CALL LIGHT INDICATOR | 5. LINE JACK |
| 3. RINGER TONE SWITCH | 6. RINGER SWITCH |

INSTALLATION


Line Cord Connection

Insert one of modular plugs of the straight cord into the line jack at the rear of the unit, then insert the other end into the wall jack.

For your convenience, you also have a telephone jack that you can use to plug any telephone in, if you wish to.

Wall Mounting

Your Ringer Box is also designed to mount on a wall. Using the wall mount bracket place it on back of the Ringer Box.

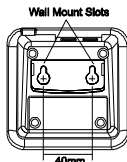

Place 2 screws into the wall then slots on the bottom of the base over the two screws heads and pull down to lock into place.

SETTING

1. Ringer Volume Control (HI/LO/OFF)

- Slide the [RINGER] switch to 'HI' position or 'LO' position to turn the ringer on. 'HI' for high volume and 'LO' for low volume
- Slide the [RINGER] switch to 'OFF' position to turn the ringer off. You still can dial out, but cannot hear ringer sound of any incoming calls via this box only.
- (Ringer LED'S will still flash to remind you there is incoming call.) Don't forget to switch the ringer to 'ON' (i.e. 'HI' or 'LO' position), otherwise, you cannot hear the ringer sound next time from this box.

2. Ringer Tone Adjustable

- Sliding the RINGERTONE switch among 1, 2 & 3 to select the ringer tone type.

3. Incoming Call Light Indicator

- The LED'S will light when there is any incoming call even if the ringer switch is set to off.

OPERATION

When there is new incoming call, the ringer box will alarm with a loud ringing sound and bright LED'S lights.

CONSUMER INFORMATION

a) This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the **bottom** of this equipment is a label that contains, among other information, a product identifier in the format **US: GXACHN-25749-TE-E. ITEM NUMBER 5683-2**. If requested, this number must be provided to the telephone company.

b) An applicable certification jacks Universal Service Order Codes (USOC) for the equipment is provided (i.e., **RJ11C**) in the packaging with each piece of approved terminal equipment.

c) A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

d) The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. [For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format **US:AAAEQ##TXXXX**. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3). For earlier products, the REN is separately shown on the label.]

e) If this equipment **Ringer Box** causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

f) The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

g) Should you experience trouble with this equipment, please contact (**Service Department**) for repair or warranty information. If the equipment is causing

harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

h) Please follow instructions for repairing if any (e.g. battery replacement section); otherwise do not alternate or repair any parts of device except specified.

i) Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.

j) **NOTICE:** If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this **Ringer Box** does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

k) This equipment is hearing aid compatible (**for product with handset only**).

SERVICE

According to FCC regulation. This equipment which has been certified and registered by the FCC, may only be repaired by authorized person, the FCC certification may be voided. Should you encounter any problems, please call the FUTURE CALL LLC.

Toll-free Customer Hotline for assistance:

1-888-934-CALL, Monday - Friday between the hours of 9:00 am - 6:00 pm PST

For general inquires, you can E-Mail to futurecall@onvol.net or visit our website at www.future-call.com

FOR WARRANTY AND OUT-OF WARRANTY SERVICE:

You may call our toll-free hot line on 1-888-934-CALL (1-888-934-2255) 9AM-6PM PST or E-mail to help@future-call.com

QUESTIONS?

**STOP...don't take unit back to the store.
LOOK...for the toll-free "help" telephone number.
LISTEN... as our experts talk you through the problem.**

For immediate answers to your questions regarding operation, missing parts or installation call:

**FUTURE CALL LLC
HOTLINE & E-MAIL AT:
1-888-934-CALL & help@future-call.com**

LIMITED WARRANTY AND SERVICE

FUTURE CALL LLC. warrants this product to be free from defective materials or factory workmanship and will replace or repair this unit or any part thereof, if it proves to be defective in normal use or service within 90 days from date of original purchase. Our obligation under this warranty is the repair or replacement of the defective instrument or any part thereof. This warranty will be considered void if unit is tampered with, improperly serviced, or subjected to misuse, negligence or accidental damage. There are no other express warranties other than those stated herein.

This warranty gives you specific legal rights, and you may also have other rights which varies from state to state.

TO OBTAIN SERVICE PLEASE E-MAIL US ON help@future-call.com OR CALL US TOLL FREE 1-888-934-CALL 9AM-6PM PST (1-888-934-2255). IF THE UNIT IS UNDER WARRANTY PROOF OF PURCHASE MUST BE PROVIDED.

Future Call LLC

For services call us. Toll free on 1-888-934-CALL (2255)

9AM – 6PM PST or E-mail help@future-call.com

Visit us on the web www.future-call.com

Made in China